




# GIGASPIRE U6 & U12 ROUTERS LED LIGHTS



The LEDs located on the corner of the GigaSpire U6 and U12 provide information on the status of the router.

	STATUS	LED LIGHT
All LED lights are off	<ol style="list-style-type: none"><li>1. The unit is turned off.</li><li>2. There is no power to the unit.</li><li>3. The UPS battery has been discharged and there is insufficient power to continue operation.</li></ol>	
LED light is blinking green	Unit is booting up or a software upgrade is in process.	
LED light is red	Boot-up failed or there is a service failure and no internet connection.	
LED light is green	Unit successfully booted up. You are connected to the internet.	
LED light is blinking green	WPS is attempting to pair with a device.	